


ONLY REFER TO THESE INSTALLATION INSTRUCTIONS!

INSTALLATION INSTRUCTIONS VENETIAN BLIND

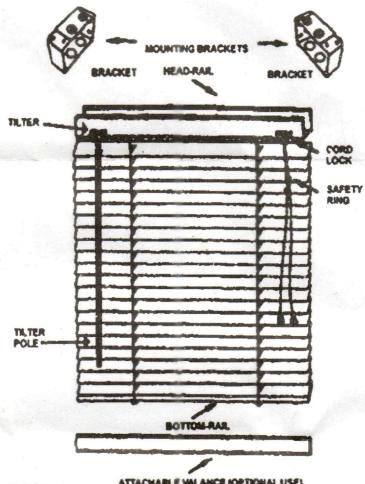


Included In Package:

One blind and parts
Two valance clips for sizes wide below 90cm (wider than 90cm have three)
Two mounting brackets
Two front caps
Nickel Plated Steel screws
One center support for sizes wider than 60cm (wider than 90cm have two)


How to install

1. Select the method of mounting that best suits your purpose
illustrations A, B, C)


A. Inside mounting to the inside of window frame.

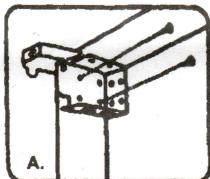

B. Outside mounting to the face or outside of window frame

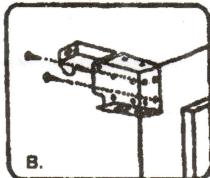

C. Ceiling mounting to an overhead surface such as the top inside or window frame or ceiling

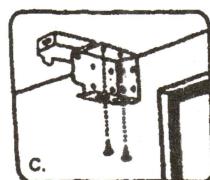

WARNING


Young children can be strangled by loops in pull cords, chains, and tapes, and inner cords that operate window coverings. They can also wrap cords around their necks. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.



2. Measure where you want the blind to hang, make sure that the blind is centered and level. When it is positioned properly, make a small pencil mark at each side of the blind to refer to when you attached the mounting bracket.
3. Hold one bracket (the large hole faces the floor) at desired height and width you have chosen, and mark the screw holes with a pencil. Then insert and tighten screw through bracket slot.
4. After the first bracket is mounted, carefully position and attach the second bracket. Double check to be sure that it is level with the first bracket and that the brackets are the proper distance apart.
5. Pick up the blind and slide the headrail into brackets. Make sure that the blind cord and the tilting pole face towards you. To adjust this blind to fit your inside window measurement, please use the bracket with the screw provided to secure the blind in place.
6. Center support(s) are provided for wide blinds only



7. Valence clip for headrail

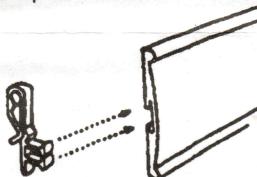

To Operate Blinds

Lowering: Hold cord at eye level and move to left pulling down gently until cord lock releases. Allow cord lock to slip through fingers until blind reaches desired level. Move pull cord to the right and release; blind will lock automatically.

Raising: Pull cord downward until blind reaches desired height, release cord, the blind locks automatically.

Tilting: Pull the string up or down to adjust the vertical position of the slats.

Important: ① Always tilt blind slats horizontally before raising or lowering the blind, this increases the life of the blind.

Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains.



WARNING



WARNING - INDIVIDUAL TASSEL CORDS

These individually tasseled cords reduce the strangulation hazard in the pull cord by removing the loop. Do not tie the cords together. Check cords periodically to make sure the cords have not twisted into a loop. This device will not prevent strangulation if young children wrap pull cords around their necks. Always keep cords out of the reach of young children.



WARNING - CLEATS

Cleats should be mounted at least 1600mm above the floor, so as to keep cords out of the reach of young children. Cords must be fully wrapped around the cleat at all times. Always keep cords out of the reach of young children.