



*Thank you for
purchasing this Roller
Blind! Please read the
instruction carefully
before use to ensure
safe and satisfactory
operation of this
product.*


INSTRUCTIONAL **MANUAL** FOR ROLLER BLINDS




FURNISHED



ASSEMBLY ACCESSORIES

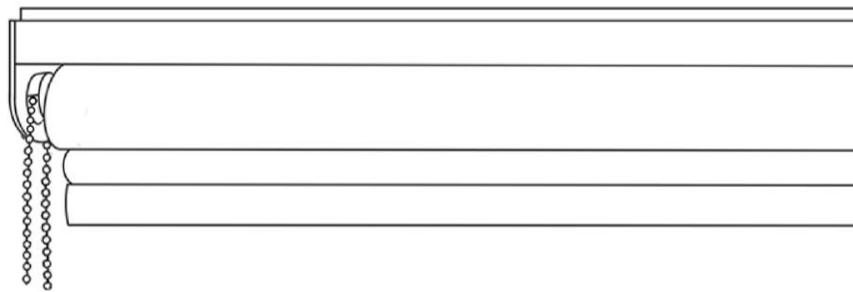

Blind Fittings

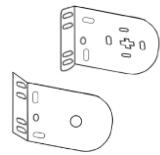


2x End Brackets




2x End Brackets Covers



 Winder with Chain




Pivot Roller

 


Bottom weight bar



 P Clip



5x Screws

 


5x Wall plugs



Chain connector

TOOLS REQUIRED FOR INSTALLATION

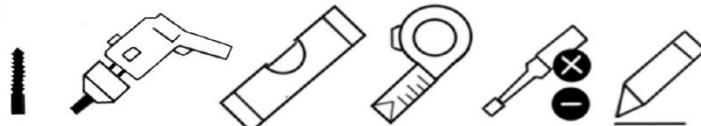

Drill bit

Drill

Leveler

Tape Measure

Screw Driver

Pencil

TOOLS TO ADJUST WIDTH (OPTIONAL)



Hack Saw




Scissors




01

TO ADJUST BLIND WIDTH


01

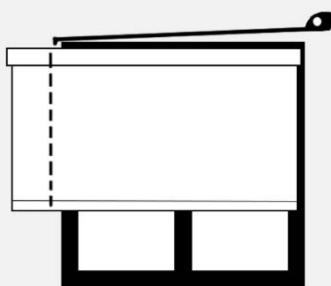


02

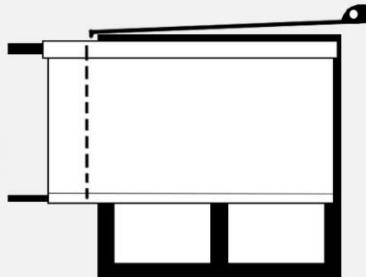

03

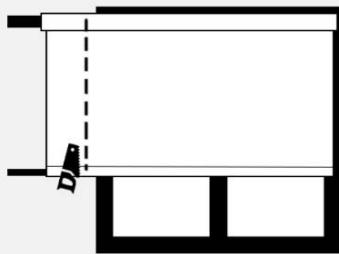

04

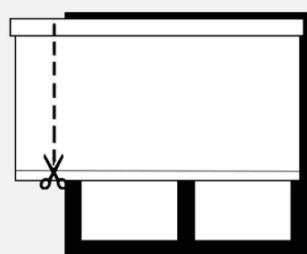

AND YOUR
BLINDS IS READY
FOR SETUP!


Decide which end you want to have the chain – the bracket instructions opposite are for installing *the blind with the chain to the right* – if you want to have the chain to the left simply flip the positions of your 2x bracket round.

02

BLIND SETUP





Insert the *bottom weight bar*, the *winder with chain* and the *pivot roller* into the relevant parts of the blind as shown.

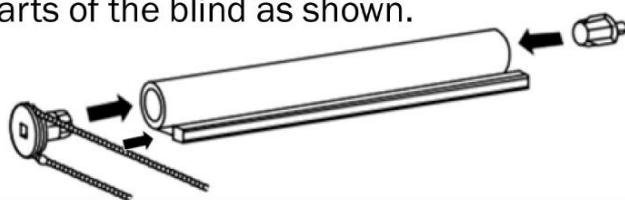

03

INSTALL BLIND PARTS


Mount the brackets as desired. It may be wall fix (A), top fix (B) or recess side fix (C)

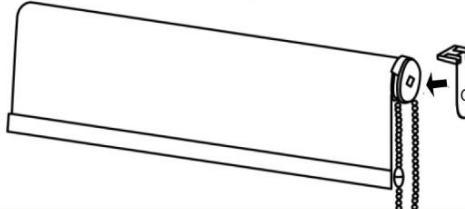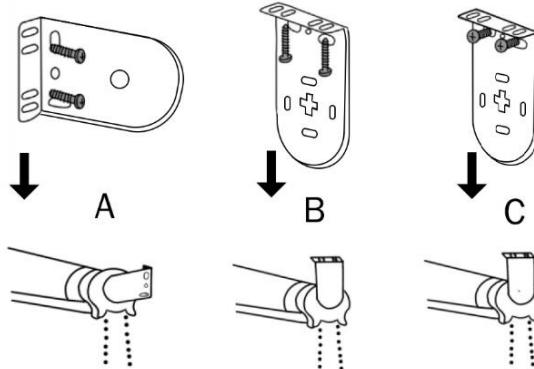

04

BRACKET POSITIONING AND FIXING

Slide the bracket covers in place as shown.

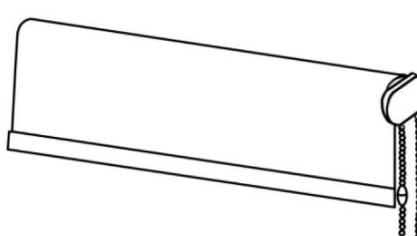

05

05


INSERT BRACKET COVERS



06


BLIND OPERATION

Pull on the chain loop to operate the blind. Always keep at least a full revolution of fabric on the roller.

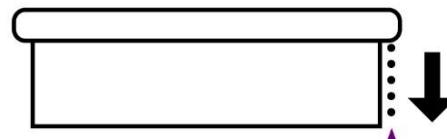

07

FIT CHILD SAFETY DEVICE

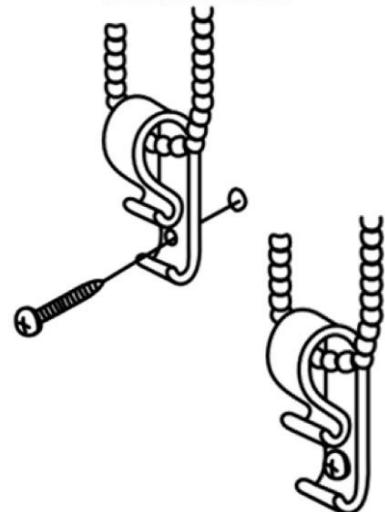

1. Pull the chain up into the child safety clip.
2. Place the child safety clip onto an adjacent wall or where the clip is fixed in such a way that the loop cannot be easily reached.
3. Ensure the control chain is pulled tight. It must be installed at the maximum distance possible from the control mechanism to prevent the loop pull cord becoming slack.
4. Screw the child safety clip in place.

Children can be strangled if this safety device is not installed. Always use this device to keep cords or chains out of reach of children. Keep the instructions for future reference. Use of additional safety devices helps reduce the risk of strangulation but cannot be considered entirely foolproof.

The Child Safety device reduces the hazards of strangulations or entanglement by limiting access to the cord or bead chain. Anchor the device with the cord or bead chain to the wall or floor, so that children cannot pull the cord or bead chain around their necks.



WARNING!

Please read all safety warnings and installation information fully before installation. Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children.

All safety clips should be positioned high enough to be out of reach of small children yet accessible to adults. All safety clips for blinds need to be fixed to a solid surface using a screw and fixing suitable for the wall or surface material. These items should not be glued or stuck in place. Keep out of the reach of young children. Small parts may serve as choking hazards. For further information go to: furnisheduk.com