

# MINI VENETIAN BLIND

FURNISHED


# WARNING

Please retain these instructions for future reference  
Please read these instructions fully before operating the blind




## INSTALLATION INSTRUCTIONS

### A) HOW TO INSTALL

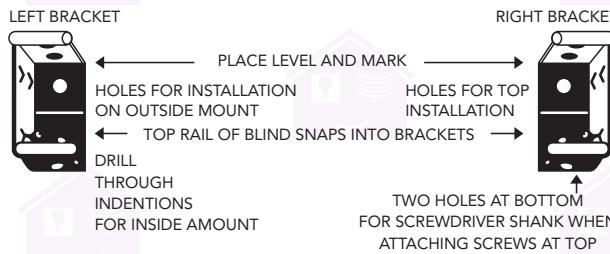


### B) CENTER SUPPORT (S) ARE PROVIDED FOR WIDE BLINDS ONLY (90cm and above)

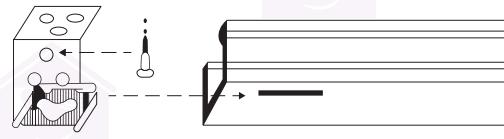


USING THE PROVIDED SCREW, INSTALL THE FIRST METAL SUPPORT BRACKET NEAR THE PULL CORD WHERE YOU CAN ALIGN THE BRACKET'S LIP INTO THE GROOVE ON TOP OF THE RAIL. ADDITIONAL SUPPORT BRACKETS ARE INCLUDED TO HOLD WIDER BLINDS, YOU JUST NEED TO SPACE THEM OUT FROM EACH OTHER AS LONG AS THE FIRST SUPPORT BRACKET IS CORRECTLY INSTALLED NEAR THE PULL CORD

### C) PLEASE NOTE!

TO ADJUST THIS BLIND TO FIT YOUR INSIDE WINDOW MEASUREMENT, PLEASE USE THE RIGHT HAND BRACKET AND THE RIGHT SIDE OF THE RAIL ALONG WITH THE SCREW PROVIDED TO SECURE THE BLIND IN PLACE  
EXAMPLE

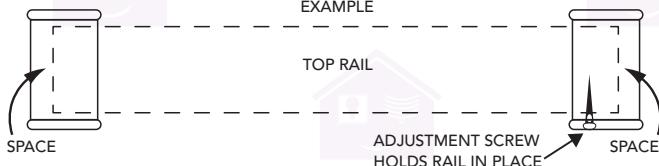

### D)

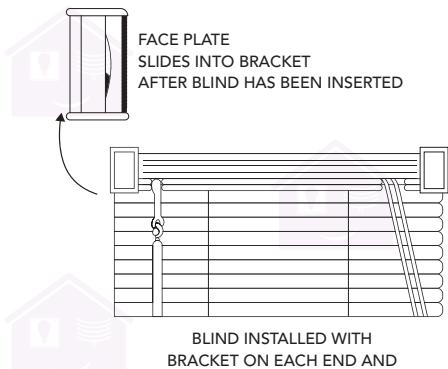

BLIND INSTALLED WITH BRACKET ON EACH END AND FACE PLATES COVERING ENDS

#### HARDWARE INCLUDED


Accessory bag contains.  
10 - 19 Screws  
2 Brackets  
2 Holdown bracket  
1 - 4 Center supports brackets  
(blinds 90cm and above)  
1 Cleat hook

Size	# of Support brackets
Below 90 cm	0
90 - 120 cm	1
135 - 150 cm	2
165 - 180 cm	3
195 - 210 cm	4

Young children can be strangled by loops in pull cords, chains and tapes, and inner cords that operate window coverings. They can also wrap cords around their necks. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.



### E) TO SECURE BLINDS AT BOTTOM OF WINDOW

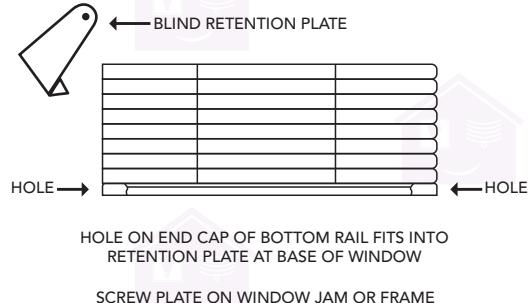


HOLE ON END CAP OF BOTTOM RAIL FITS INTO RETENTION PLATE AT BASE OF WINDOW

SCREW PLATE ON WINDOW JAM OR FRAME

### TO SHORTEN

IF YOU CARE TO SHORTEN BLIND, REMOVE THE SNAP ON THE BOTTOM RAIL AFTER BLIND IS INSTALLED. PULL CORD UP AND OUT UNDER LAST OF NEW SIZE. REMOVE BOTTOM RAIL AND EXCESS SLATS. REPLACE BOTTOM RAIL. THREAD CORD THROUGH HOLE AND TIE OFF CUT LADDER STRING WITH ENDS LONG ENOUGH TO FOLD UNDER. REPLACE SNAP OVER CORD AND STRING ON BOTTOM RAIL.

### TO OPERATE

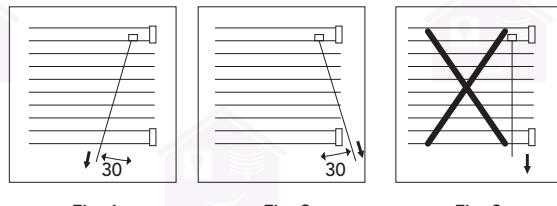


**TO RAISE BLIND:** Move cord to the left then pulling it down gently until cord lock releases. Pull cord leftward until blind reaches desired height (Fig. 1), then move cord to the right and release (Fig. 2), blind will lock automatically.

**TO LOWER BLIND:** Move cord to the left then pulling it down gently until cord lock releases. Allow cord to slip through fingers until blind reaches desired level. Move cord to the right and release, blind will lock in the desired position automatically.

**WARNING:** Do not pull the cord downward directly! (Fig. 3)

### FIXING THE CLEAT

You need to fix the cleat into an easy access position on the wall, out of reach of young children. Screw it into place using the screws supplied. Wind the cord around the bottom of the cleat, then around the cleat in a figure of eight. This should be installed as close to the headrail as possible and in all cases not less than 1.5m from the floor.

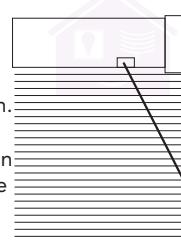

Cleat Hook

**NOTE:** Check the condition of the cleat hook regularly and replace if faulty.